

Owner's Manual

02 Series Electronic Flowmeter with Scaled Pulse Output

IMPORTANT NOTICE

This meter is not approved for use with flammable liquids. Do not use with liquids or chemicals that are not compatible with the wetted materials found in the **Specifications** section.

This meter is not legal for trade applications.

This meter is sensitive to electrical "noise" and may not operate correctly if located near certain electrical equipment.

CALIBRATION

This meter has a permanent factory calibration for light viscosity fluids. If installed and used correctly, accuracies of no greater than $\pm 5\%$ will be obtained.

INSTALLATION

This meter may be installed in-line either horizontally or vertically, or at the end of the hose adjacent to the nozzle if present. For best accuracy, provide 10 inches of pipe upstream and 5 inches of pipe downstream. The use of pipe sealant or PTFE tape is acceptable. Review your application for suitability. Attach meter with arrow on outlet port pointed in the direction of flow.

For Aluminum Housings: Using a wrench, tighten meter at the ends.

For Nylon Housings: Hand tighten only. Avoid using metal connections, as this could damage the housing.

OPERATION

Batch and Cumulative Totals

This meter maintains two totals: **Batch** and **Cumulative**. The **Batch** total may be reset to measure flow during a single use. The **Cumulative** total provides continuous measurement and may not be manually reset. The **Batch** total is labeled **TTL1**. The **Cumulative** total is labeled **TTL2**. When the **Cumulative** total reaches a maximum reading of 9999, it will automatically reset to zero. Press the DISPLAY button briefly to switch between **Batch** and **Cumulative** totals.



Batteries Included

Activate the Meter

Turn the meter ON by starting fluid flow or briefly pressing the DISPLAY button. The meter will display the batch or cumulative total from last use.

Press DISPLAY briefly to display the batch total. Hold the DISPLAY button down for three seconds to reset that batch total to zero.

This meter is programmed to turn off automatically if not used for approximately one minute.

Scaled Output Pulse

For every whole unit (Gallon or Litre) that passes through the meter's Batch Total (TTL1), a single pulse is transmitted via the attach cable. The White wire is signal and the Black wire is common (GND) (**See Specifications**).

Note: Some interface devices may not have an internal pull-up resistor. Use a minimum 820 ohms resistor if necessary (**See Figure 1**).

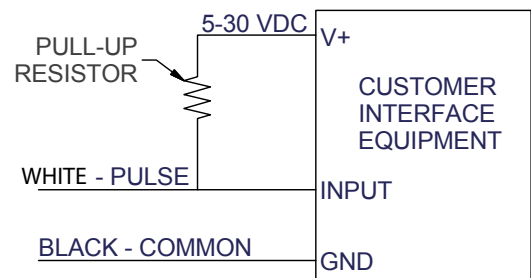


Figure 1

MAINTENANCE

Proper handling and care will extend the life and service of this meter.

Turbine Rotor

This meter is virtually maintenance-free. However, it is important for the rotor to move freely. Keep the meter clean and clear of contaminants.

Remove debris or deposits from the rotor using a soft brush or small probe. Be careful not to damage the turbine rotor or supports.

CAUTION

Blowing compressed air through the turbine assembly could damage the rotor.

BATTERY REPLACEMENT

The meter is powered by two AAA alkaline batteries which may be replaced while the meter is installed. When batteries are removed or lose power, the batch and cumulative totals reset to zero but the factory calibration is retained.

If the meter display becomes dim or blank, replace the batteries as follows:

1. Remove the four Phillips-head screws from the face of the meter and lift the faceplate from the turbine.
2. Remove the old batteries and clean any corrosion from the terminals.
3. Install new batteries. Make sure the positive post is in the correct position.
4. When the batteries are replaced, the faceplate will power ON. Check the display to ensure normal functions have resumed before assembling again.
5. Re-seat batteries, if necessary, and position the faceplate on the turbine housing. To avoid moisture damage, make sure the seal is fully seated. Tighten the four screws on the faceplate.

SERVICE

For technical assistance, warranty replacement or repair contact your FLOMEC® distributor:

In North or South America:

888-996-3837 / GPI.net

Outside North or South America:

+61 2 9540 4433 / flomec.com.au


To obtain prompt, efficient service, always be prepared with the following information:

- The model number
- The manufacturing date code (located under the coverplate)

For warranty work, always be prepared with your original sales slip or other evidence of purchase date.

Please contact your FLOMEC® distributor before returning any part. It may be possible to diagnose the trouble and find a solution with a telephone call. You may also be informed of any special requirements you will need to follow for shipping.

SPECIFICATIONS

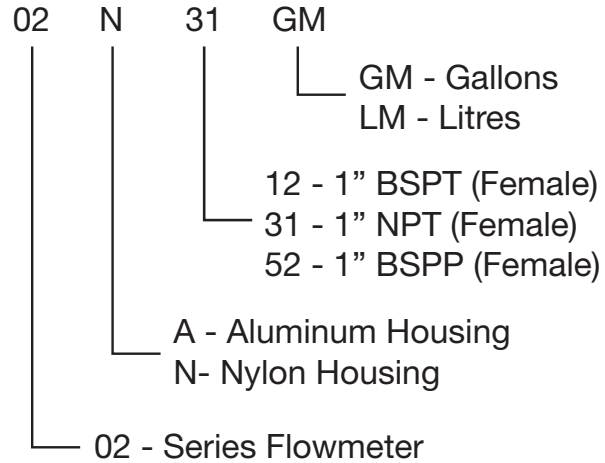

Flowrate:	3 to 30 GPM (11 to 113 LPM)
Working Pressure (MAX.):	150 PSIG (10.3 bar) Nylon 300 PSIG (21 bar) Aluminum
Operating Temperature:	+14°F to +130°F (-10°C to 55°C)
Storage Temperature:	-40°F to +158°F (-40°C to 70°C)
Wetted Materials:	
Housing:	Noted above
Bearings:	Ceramic
Shaft:	Tungsten Carbide
Rotor / Supports:	Nylon
Rings:	316 Stainless Steel
Signal Generator:	Ferrite
Pulse Out Description:	Open Collector (a.k.a. npn or current sinking)
Pulse Duration:	250 msec
Pulse Amplitude:	5 to 30 VDC
Scaling:	One pulse per Gallon or Litre
Cable Length:	5 ft. / 1.5 meters



The Waste Electrical and Electronic Equipment (WEEE) directive (2002/96/EC) was approved by the European Parliament and the Council of the European Union in 2003. This symbol indicates that this product contains electrical and electronic equipment that may include batteries, printed circuit boards, liquid crystal displays or other components that may be subject to local disposal regulations at your location. Please understand those regulations and dispose of this product in a responsible manner.

Declaration of Conformity

Manufacturer's Name: Great Plains Industries, Inc.
Manufacturer's Address: 5252 East 36th Street North
Wichita, KS USA 67220-3205

Declares, that the product:
Product Name: Electronic Digital Meter
Model Numbers: 02A12LM, 02N12LM, 02A31GM,
02N31GM, 02A31LM, 02N31LM,
and 02A52LM

Conforms to the following Standards:
EMC: EN 50081-1 : 1992 (Reference EN 55022)
EN 55082-1 : 1992

Supplementary Information:

- The products comply with the requirements of the EMC Directive 89/336/EEC.
- The products conform to Council Directive 2011/65/EU and 2002-95-EC as amended (RoHS Directive) relating to the restriction of certain hazardous substances in electrical and electronic equipment.
- This product is not recommended for custody transfer or application where levying by consumption takes place.
- This product has insufficient internal volume size or pressure ratings to meet a pressure directive.
- Year of Manufacturing is displayed directly on the product as Manufacturing Date Code (Mfg. Date) indicating week and year.

I the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s) and Standard(s).

Signature:



Full Name:

Victor Lukic

Position:

President

Great Plains Industries, Inc.

Place:

Wichita, KS USA

April 2014

GREAT PLAINS INDUSTRIES **GPI**[®]
5252 E. 36th St. N. Wichita, KS 67220-3205
316-686-7361 / f. 316-686-6746 / GPI.net



Limited Warranty Policy

Great Plains Industries, Inc. 5252 E. 36th Street North, Wichita, KS USA 67220-3205, hereby provides a limited warranty against defects in material and workmanship on all products manufactured by Great Plains Industries, Inc. This product includes a 1 year warranty. Manufacturer's sole obligation under the foregoing warranties will be limited to either, at Manufacturer's option, replacing or repairing defective Goods (subject to limitations hereinafter provided) or refunding the purchase price for such Goods theretofore paid by the Buyer, and Buyer's exclusive remedy for breach of any such warranties will be enforcement of such obligations of Manufacturer. The warranty shall extend to the purchaser of this product and to any person to whom such product is transferred during the warranty period.

The warranty period shall begin on the date of manufacture or on the date of purchase with an original sales receipt. This warranty shall not apply if:

- A. the product has been altered or modified outside the warrantor's duly appointed representative;
- B. the product has been subjected to neglect, misuse, abuse or damage or has been installed or operated other than in accordance with the manufacturer's operating instructions.

To make a claim against this warranty, contact the GPI Customer Service Department at 316-686-7361 or 888-996-3837. Or by mail at:

Great Plains Industries, Inc.
5252 E. 36th St. North,
Wichita, KS, USA 67220-3205

If you are outside North or South America contact:

Great Plains Industries – Australia
1/16 Atkinson Road,
Taren Point NSW 2229, Sydney, Australia

The company shall, notify the customer to either send the product, transportation prepaid, to the company at its office in Wichita, Kansas, or to a duly authorized service center. The company shall perform all obligations imposed on it by the terms of this warranty within 60 days of receipt of the defective product.

GREAT PLAINS INDUSTRIES, INC., EXCLUDES LIABILITY UNDER THIS WARRANTY FOR DIRECT, INDIRECT, INCIDENTAL AND CONSEQUENTIAL DAMAGES INCURRED IN THE USE OR LOSS OF USE OF THE PRODUCT WARRANTED HEREUNDER.

The company herewith expressly disclaims any warranty of merchantability or fitness for any particular purpose other than for which it was designed.

This warranty gives you specific rights and you may also have other rights which vary from U.S. state to U.S. state.


Note: In compliance with MAGNUSON MOSS CONSUMER WARRANTY ACT – Part 702 (governs the resale availability of the warranty terms).

Wichita · Sydney · Mexico City



Great Plains Industries, Inc. / 888-996-3837 / GPI.net

Commercial Grade **09 COMPUTER ELECTRONICS** Owner's Manual

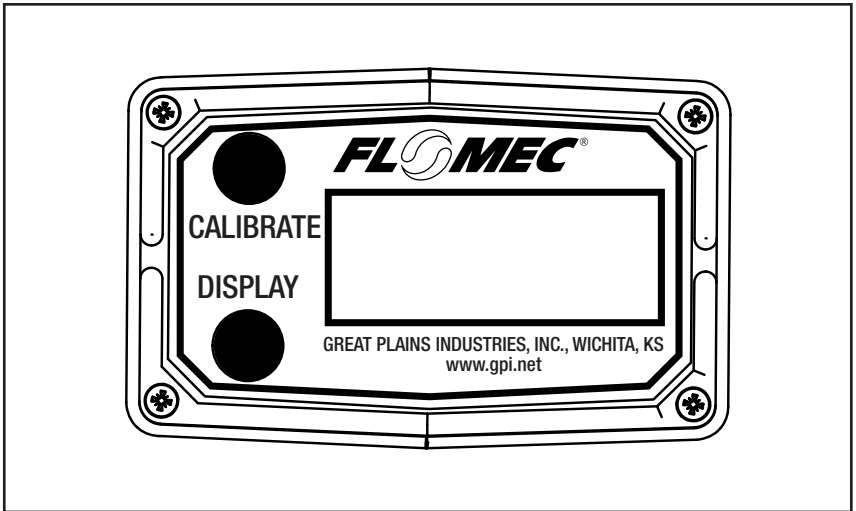

To the owner . .

Congratulations on receiving your GPI Commercial Grade Computer Electronics. We are pleased to provide you with a product designed to give you maximum reliability and efficiency.

Our business is the design, manufacture, and marketing of liquid handling, agricultural, and recreational products. We succeed because we provide customers with innovative, reliable, safe, timely, and competitively-priced products. We pride ourselves in conducting our business with integrity and professionalism.

We are proud to provide you with a quality product and the support you need to obtain years of safe, dependable service.



Victor Lukic, President
Great Plains Industries, Inc.

GENERAL INFORMATION

This manual will assist you in operating and maintaining the Computer Electronics of the GPI Commercial Grade Meters. (See Figure 1) Calibration details are given in this manual. Information on turbine housings and accessory modules are contained in other manuals. Please reference those as necessary.

Figure 1

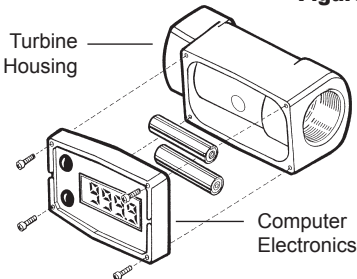



TABLE OF CONTENTS


General Information.....	2
Installation	3
Operation.....	4
Calibration	5
User Configuration.....	6
Maintenance	7
Troubleshooting.....	8
Specifications	9
Parts	10
Service.....	10

Before Getting Started

Take the time to fully acquaint yourself with all information about the components of your GPI Electronic Digital Meter. If you need assistance, contact the distributor from whom you purchased your computer.

 This symbol is used throughout the manual to call your attention to safety messages.

 **WARNING** Warnings alert you to the potential for personal injury.

 **CAUTION** Cautions call your attention to practices or procedures which may damage your equipment.

Notes give information that can improve efficiency of operations.

It is your responsibility to make sure that all operators have access to adequate instructions about safe operating and maintenance procedures.

Read Me!

For your safety, review the major warnings and cautions below before operating your equipment.

⚠ WARNING

The apparatus enclosure may contain aluminum and is considered to constitute a potential risk of ignition by impact or friction. Care must be taken into account during installation and use to prevent impact or friction.

⚠ WARNING

Part of the enclosure is constructed from plastic. To prevent the risk of electrostatic sparking the plastic surface should only be cleaned with a damp cloth.

1. This equipment is approved to handle only fluids that are compatible with all wetted materials.
2. When measuring flammable liquids, observe precautions against fire or explosion.
3. When handling hazardous liquids, always follow the liquid manufacturer's safety precautions.
4. When working in hazardous environments, always exercise appropriate safety precautions.
5. For best results, always verify accuracy before use.

Product Description

These computer electronics are designed specifically for use on GPI Commercial Grade Turbine Housings.

The CMOS, microprocessor-based electronics have extremely low power requirements and data retention capabilities in both RAM and ROM. Information is clearly displayed on a large 6-digit LCD readout with two-point floating decimal for totals from .01 to 999,999. All operations are easily accessed with the two buttons on the front panel.

Liquid flows through the turbine housing causing an internal rotor to spin. As the rotor spins, an electrical signal is generated in the pickup coil. This pulse data is translated from the turbine into calibrated flow units shown on the computer's readout.

Upon receipt, examine your equipment for visible damage. The computer is a precision measuring instrument and should be handled as such. If any items appear damaged or missing, contact your distributor.

Make sure your computer model meets your specific needs. Refer to the Specifications Section to confirm required features. The model number of your computer is displayed on the lower side of the computer and also underneath a battery.

INSTALLATION

If you ordered your computer electronics with a turbine housing, it is installed at the factory.

If you ordered your computer separately from your turbine, simply mount the computer on the turbine with the four screws at the corners of the faceplate. Make sure the seal is fully seated before tightening the screws.

If you ordered the computer with turbine and an accessory module, please review and thoroughly understand all installation instructions before proceeding.

All GPI turbines are designed to measure flow in only one direction. The direction is indicated by the arrow cast-molded in the turbine outlet. If the opposite direction is desired, simply rotate the computer electronics 180 degrees prior to installation.

Avoid electronically “noisy” environments. Install at least 6 inches (15.2 cm) away from motors, relays, or transformers.

All GPI A1 Series meters are Factory Mutual Approved and carry a Class 1, Division 1 Approval for hazardous environments. In addition, GPI meters have NEMA Type 4 enclosures. They are tested and calibrated at the factory using state-of-the-art calibration procedures and testing equipment.

To ensure accurate measurement, remove all air from the system before use.

1. Ensure some back pressure on the turbine.
2. Open the discharge valve or nozzle and allow fluid to completely fill the system. Make sure the stream is full and steady.
3. Close the discharge valve or nozzle.
4. Start normal operations.

It is strongly recommended that accuracy be verified prior to use. To do this, remove all air from the system, measure an exact known volume into an accurate container, and verify the volume against the readout or recording equipment. If necessary, use a correction factor to figure final volume. For best results, accuracy should be verified periodically as part of a routine maintenance schedule.

Computer Display

All operations are reflected in the LCD readout. The large center digits indicate amounts, where smaller words or “icons” located above and below indicate specific information regarding totals, flow, calibration and units of measure.

Activate the Meter

Computer is on continuously and always ready to perform. The computer is powered by field replaceable batteries. When display becomes dim, faded or the low battery message appears (see below), the batteries need to be replaced. Reference the Maintenance Section for details.

The logo for LobAtt, featuring the word "LobAtt" in a stylized, bold, sans-serif font. The letters are black with a white outline, giving it a three-dimensional appearance.

Batch and Cumulative Totals

The computer maintains two totals. The Cumulative Total provides continuous measurement and cannot be manually reset. The Batch Total can be reset to measure flow during a single use. The Cumulative Total is labeled TOTAL 1, Batch Total is labeled TOTAL 2 BATCH.

When the Cumulative Total reaches a display reading of 999,999 the computer will highlight an X10 icon. This indicates to the operator that a zero must be added to the 6 digits shown. When the next rollover occurs, the computer will highlight an X100 icon. This indicates to the operator that two zeros must be added to the 6 digits shown.

Press the DISPLAY button briefly to switch between the TOTAL 1, TOTAL 2 BATCH and FLOWRATE (if applicable). Press DISPLAY briefly to display the TOTAL 2 BATCH. Hold the DISPLAY button for 3 seconds to reset the Batch Total to zero.

When fluid is flowing through the meter, a small propeller icon is highlighted.

Flowrate Feature (some models)

To use this feature, press and release DISPLAY button until FLOWRATE icon appears. The factory set time base will be highlighted to the right of FLOWRATE (M = minutes, H = hours, D = days). When FLOWRATE is invoked, the display will be indicating rate of flow.

Factory and Field Calibration

All calibration information is visible to the user as icons on the top line of the display, above the numeric digits.

All units are configured with a "factory" calibration. Both gallons and litres are available ("GL" or "LT" will be displayed). While holding the CALIBRATE button, briefly press DISPLAY to toggle between gallons and litres. This factory calibration (indicated with FAC) is permanently programmed into the computer and is not user adjustable.

NOTE: Your computer may have other units of measure programmed into it. If so, holding the CALIBRATE button and momentarily pressing the DISPLAY button will toggle through all factory set units. Other possible units are: IGL (imperial gallon), QT (quart), CF (cubic feet), CM (cubic meter), BL (42 gal. barrel), CC (cubic centimeter) or OZ (ounce).

Switching between different units will not corrupt the Total's contents. For example, in GL mode, the computer totalizes 10.00 gallons, if the user switches to LT mode, the display will read 37.85 litres (the same volume, different unit).

The "field" calibration may be set by the user, and can be changed or modified at any time using the calibration procedure described in the Calibration Section. Totals derived from the field calibration are invoked when the FAC icon is no longer visible on the top line of the display.

CALIBRATION

Verify Accuracy Before Beginning Field Calibration

For the most accurate results, dispense at a flowrate which best simulates your actual operating conditions. Avoid "dribbling" more fluid or repeatedly starting and stopping the flow. This can result in less accurate calibrations.

Make sure you meet the meter's minimum flowrate requirements:

Low Flow meter	0.3 GPM (1 LPM)
1 inch meter	3 GPM (11 LPM)
2 inch meter	30 GPM (113 LPM)

The use of a uniformly dependable, accurate calibration container is recommended for the most accurate results. For best results, the meter should be installed and purged of air before field calibration.

Due to high flowrate, it is strongly recommended that Field Calibration of two inch meters be completed with a combination of volume and weight using fine resolution scales.

Field Calibration Necessity

Field Calibration and Factory Calibration are defined in the Operation Section. Factory calibration settings are programmed into each computer during manufacturing, using stoddard test solvent at 70° F (21° C) for Low Flow and one inch meters and water at 70° F (21° C) for two inch meters. Settings are correct for light liquids such as water, gasoline or diesel. Readings using the Factory Calibration (FAC) may not be accurate in some situations, for example, “heavy” liquids such as motor oil and under extreme temperature conditions, non-standard plumbing configurations or with fluids other than mentioned above.

For improved accuracy under such conditions, the computer allows for “field” calibration, that is, user entry of custom calibration parameters. A “single-point” calibration may yield acceptable accuracy when used in a non-standard application.

Field Calibration Procedures (Correction Factor Method)

1. To calibrate, press and hold the CALIBRATE and DISPLAY buttons for about 3 seconds until you see FLdCAL. Release both buttons and you will see CF - 00.0. You are now in the field calibration mode and values from -99.9% to +99.9% can be entered.
2. The +/- position appears either as an “underscore” character for plus, or as a “hyphen” character for minus. The DISPLAY button selects the position and the CALIBRATE button toggles this character.
3. The DISPLAY button can then be pushed to select the numeric positions. Press the CALIBRATE button to scroll from 0 to 9. Enter the percentage of change you want the display to correct. When satisfied with the value, press both CALIBRATE and DISPLAY buttons simultaneously. CALEnd will be displayed and unit will go back to normal operation, less the FAC (factory calibration) icon.
4. All enabled units-of-measure remain visible and selectable – the entered correction will be applied to all enabled units.
5. To return to factory calibration (FAC), press and hold both CALIBRATE and DISPLAY buttons for about 3 seconds until FACCAL is displayed. Then release buttons. Unit should return to normal operation and FAC icon is visible.

USER CONFIGURATION

The “09” series GPI display has been programmed with many new features, most of which can be enabled by the end user by way of a configuration process. By disabling “unnecessary” features, day-to-day flowmeter operation can be greatly simplified, making the unit easier to use. There are several features that GPI disables by default when shipping standard meters. (For example, K-Factor Entry Field Calibration, described below.) For more advanced users, it may be desirable to enable ALL possible features. User configurable features include:

- Totalizers/Modes Enabled (Cumulative Total, Batch 2 Total, Flowrate Mode)
- Flowrate Timebase (Minute, Hour, Day)

- Factory Calibration Curve Units Enabled – Gallons, Litres, Imperial Gallons, Quarts, Ounces, Cubic Feet, Cubic Centimeters, Cubic Meters or Barrels (42 Gal.)
- Dispense/Display or K-Factor Entry Calibration

Changing Configuration Settings

Access to the configuration process is restricted for security until a “password” is entered. Contact your distributor or GPI to get the password and instructions to unlock and reset configuration settings. This information is also available on the GPI Web site. Configurations are entered and stored as six-digit “codes” where each digit represents a setting for one of the configuration options. New configuration settings are stored in the computer’s long-term memory and will not be lost either in OFF mode or during battery change.

K-Factor Entry Field Calibration

Presently all GPI computers are programmed with three different field calibration methods, only one of which is active, the “correction factor” calibration procedure described above. It is possible to activate “K-Factor entry” or “dispense/display” field calibration by changing configuration settings. Contact your distributor or GPI to get the correct password, configuration code and instructions for this calibration method. This information is also available on the GPI Web site.

MAINTENANCE

The computer electronics is powered by lithium batteries which provide at least 5 years of use. Removing the

batteries before storing the meter will extend battery life. If the meter’s readout should become dim, blank or the low battery message appears (see below), the batteries need to be replaced. Replacement batteries can be ordered from your distributor or the factory. See details in the Parts Section.



When batteries are disconnected or fail, the Batch and Cumulative Totals will maintain the value they had. Factory and Field Calibration Curves are retained in the meter’s computer when power is lost.

It is strongly recommended that battery check and terminal cleaning be a part of a routine maintenance schedule. Battery terminals should be cleaned annually. Batteries can be replaced without removing the meter from the piping system.

Replace Batteries

1. Remove the corner screws from the meter face and lift the computer electronics from the turbine.
2. Remove the batteries.
3. Check the battery terminals and remove any corrosion.
4. Install the new batteries and make sure the positive posts are positioned correctly. When the batteries are installed correctly, the computer powers on automatically and the readout displays information.
5. Make sure the seal is fully seated before placing the computer electronics on the turbine. Tighten the four screws.
6. Do not clean exterior of computer assembly with Isopropyl Alcohol.

TROUBLESHOOTING

Symptom	Probable Cause	Corrective Action
A. METER IS NOT ACCURATE	<ol style="list-style-type: none"> 1. Field Calibration not performed properly 2. Factory Calibration not suitable for liquid being measured 3. Meter operated below minimum flowrate 4. Meter partially clogged with dried liquid 5. Turbine bearings partially clogged with dried liquid 6. Sealant material wrapped around rotor 7. Installed too close to fittings 8. Installed too close to motors or electrically "noisy" environment 	<p>Field calibrate again or select Factory Calibration.</p> <p>Perform a Field Calibration according to Calibration Section.</p> <p>Increase flowrate.</p> <p>Remove meter. Clean carefully. Make sure rotor spins freely.</p> <p>Remove meter. Clean carefully. Make sure rotor spins freely.</p> <p>Remove meter. Make sure rotor spins freely.</p> <p>Install correctly.</p> <p>Install correctly.</p>
B. READOUT FADED OR BLANK	<ol style="list-style-type: none"> 1. Batteries weak, dead or not connected 2. Computer defective 	<p>Remove computer, check and replace batteries if necessary.</p> <p>Contact the factory.</p>
C. NORMAL FLOWRATE BUT METER DOES NOT COUNT	<ol style="list-style-type: none"> 1. Field Calibration not performed correctly 2. Rotor stuck or damaged 3. Sealant material wrapped around rotor 4. Computer defective 	<p>Field Calibrate again or select Factory Calibration.</p> <p>Remove meter. Make sure rotor spins freely.</p> <p>Remove meter. Make sure rotor spins freely.</p> <p>Contact the factory.</p>
D. REDUCED FLOWRATE AND METER DOES NOT COUNT	<ol style="list-style-type: none"> 1. Meter clogged with dried liquids 2. Below minimum flowrate 	<p>Remove meter. Clean carefully. Make sure rotor spins freely.</p> <p>Increase flow.</p>
E. CANNOT GET METER INTO FIELD CALIBRATION	<ol style="list-style-type: none"> 1. Wrong button sequence 2. Computer circuit board defective 3. Button defective 	<p>Proceed with calibration according to the Calibration Section.</p> <p>Replace computer. Contact the factory.</p> <p>Replace computer. Contact the factory.</p>

SPECIFICATIONS

Standard Features Include:

- 2 Totalizing Registers
- 1 Factory Calibration Curve
- 1 Field Calibration Curve
- Rate of Flow Feature
- Flowrate Time Base in Minutes

Input Pulse Rate:

Min. Pulse In: DC
Min. Coil Input: 10 Hz
Max. Raw: 1,000 Hz

K-Factor:

Min.: 0.1 pulses/unit
Max.: > 999,999 pulses/unit

Field Calibration Correction:

Min.: -99.9%
Max.: +99.9%

Readout Totals:

Min. Display: 0.01
Max. Display: 999,999 (x 100)

Temperatures:


Operational: 0° to +140° F
(-18° to +60° C)
Storage: -40° to +158° F
(-40° to +70° C)

If wider operating temperature ranges are desired, reference information on GPI Remote Kits.

Power:

Internal
Power Supply: 2 Lithium
Batteries at
3 volts each
Battery Life: 5 years of use

Computer Electronics Terminal Connections

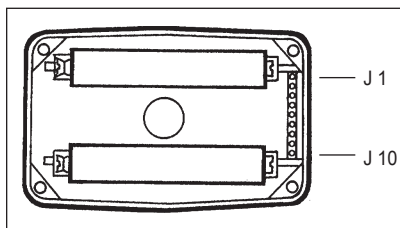

J-1 Reset

Programming interfaces not accessible to user.

J-2 Pulse Signal Output

This supplies a high-level amplified open collector signal. Output will withstand a maximum open-circuit voltage of 60-volts DC and a maximum closed-circuit of 100 mA.

J-4 Pulse Signal Input

Requires a sine or square wave with open-circuit voltage of 3-30 volts P-P, a maximum rise/fall rate of 0.01 V/ μ second and a maximum frequency of 750 Hz.

J-5 Power Input

When used with Ground (J1-6), this has reverse polarity protection, but no on-board voltage regulation. Supplied voltage must be 5.75-volts DC \pm 5%.

J-6 Ground

J-7, 8, Programming interfaces. Not accessible to user.

J-9, 10

NOTE: Safety approvals are void if any external connections are made to computer electronics.

PARTS

The factory, when provided with model number and serial number, can replace your entire Computer Electronics Assembly.

Order replacement kits, parts, and accessories with the part numbers given here.

Part No.	Description
113520-1	Battery Replacement Kit
901002-52	Seal
116000-1	Large (5 gal.) Calibration Container. Use for water based fluids. Do not use with fuel products.

SERVICE

For warranty consideration, parts, or other service information, please contact your local distributor. If you need further assistance, call the GPI Customer Service Department in Wichita, Kansas, during normal business hours.

1-888-996-3837

To obtain prompt, efficient service, always be prepared with the following information:

1. The model number of your computer electronics.
2. The serial number or manufacturing date code of your computer electronics.
3. Specific information about part numbers and descriptions.

For warranty work always be prepared with your original sales slip or other evidence of purchase date.

Returning Parts

Please contact the factory before returning any parts. It may be possible to diagnose the trouble and identify needed parts in a telephone call. GPI can also inform you of any special handling requirements you will need to follow covering the transportation and handling of equipment which has been used to transfer hazardous or flammable liquids.

⚠ CAUTION

Do not return computer electronics or meters without specific authority from the GPI Customer Service Department. Due to strict regulations governing transportation, handling, and disposal of hazardous or flammable liquids, GPI will not accept computer electronics or meters for rework unless they are completely free of liquid residue.

⚠ CAUTION

Meters not flushed before shipment can be refused and returned to the sender.

Declaration of Conformity

We declare, that the product:

Product Name: Electronic Digital Meter
Model Numbers: 03*****
A1*****
A2*****
G2*****9***

Model numbers include all combinations of an alpha-numeric series as illustrated above.

Conforms with the requirements of the Directives below by compliance with the Standards subsequently listed:

1. Council Directive 2004/108/EC (EMC Directive) relating to Electro-Magnetic Compatibility,
EN 61000-6-2:2005
EN 61000-6-3:2007/A1:2011
2. Council Directive 94/9/EC (until April 19th, 2016) and Directive 2014/34/EU (from April 20th, 2016)
relating to equipment or protective systems intended for use in potentially explosive atmospheres,
EN 60079-0:2012
EN 60079-11:2012
EN 60529+A1:2000
3. Council Directive 2011/65/EU and 2002-95-EC as amended (RoHS Directive) relating to the restriction of
certain hazardous substances in electrical and electronic equipment.

Supplementary Information:

- This product meets an (Ingress Protection) IP65 rating.
- This product has insufficient internal volume size or pressure ratings to meet a pressure directive.
- This product is not recommended for custody transfer or application where levying by consumption takes place.

I the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s) and Standard(s).

Signature:



Full Name:

Victor Lukic

Position:

President
Great Plains Industries, Inc.

Place:

Wichita, KS USA
March 2016

Notified Body:

FM Approvals Ltd.
1 Windsor Dials
Windsor, Berkshire, UK SL4 1RS

Identification No: 1725

EC-Type Examination Certificate No: FM13ATEX0016X

GREAT PLAINS INDUSTRIES 
5252 E. 36th St. N. Wichita, KS 67220-3205
316-686-7361 / f. 316-686-6746 / GPI.net

Limited Warranty Policy

Great Plains Industries, Inc. 5252 E. 36th Street North, Wichita, KS USA 67220-3205, hereby provides a limited warranty against defects in material and workmanship on all products manufactured by Great Plains Industries, Inc. This product includes a 1 year warranty. Manufacturer's sole obligation under the foregoing warranties will be limited to either, at Manufacturer's option, replacing or repairing defective Goods (subject to limitations hereinafter provided) or refunding the purchase price for such Goods theretofore paid by the Buyer, and Buyer's exclusive remedy for breach of any such warranties will be enforcement of such obligations of Manufacturer. The warranty shall extend to the purchaser of this product and to any person to whom such product is transferred during the warranty period.

The warranty period shall begin on the date of manufacture or on the date of purchase with an original sales receipt. This warranty shall not apply if:

- A. the product has been altered or modified outside the warrantor's duly appointed representative;
- B. the product has been subjected to neglect, misuse, abuse or damage or has been installed or operated other than in accordance with the manufacturer's operating instructions.

To make a claim against this warranty, contact the GPI Customer Service Department at 316-686-7361 or 888-996-3837. Or by mail at:

Great Plains Industries, Inc.
5252 E. 36th St. North
Wichita, KS, USA 67220-3205

If you are outside North or South America contact:

Great Plains Industries – Australia
1/16 Atkinson Road,
Taren Point NSW 2229, Sydney, Australia

The company shall, notify the customer to either send the product, transportation prepaid, to the company at its office in Wichita, Kansas, or to a duly authorized service center. The company shall perform all obligations imposed on it by the terms of this warranty within 60 days of receipt of the defective product.

GREAT PLAINS INDUSTRIES, INC., EXCLUDES LIABILITY UNDER THIS WARRANTY FOR DIRECT, INDIRECT, INCIDENTAL AND CONSEQUENTIAL DAMAGES INCURRED IN THE USE OR LOSS OF USE OF THE PRODUCT WARRANTED HEREUNDER.

The company herewith expressly disclaims any warranty of merchantability or fitness for any particular purpose other than for which it was designed.

This warranty gives you specific rights and you may also have other rights which vary from U.S. state to U.S. state.

Note: In compliance with MAGNUSON MOSS CONSUMER WARRANTY ACT – Part 702 (governs the resale availability of the warranty terms).



IECEX



ATEX

NEMA
4

(IP65)

Wichita · Sydney · Mexico City

GREAT PLAINS INDUSTRIES



Great Plains Industries, Inc. / 888-996-3837 / GPI.net